




Harman Kardon Onyx Studio 2 Control Board Replacement

Following this guide will lead you to successfully replacing the control board of the Onyx Studio 2 speaker.

Written By: Alexandra Achtenberg

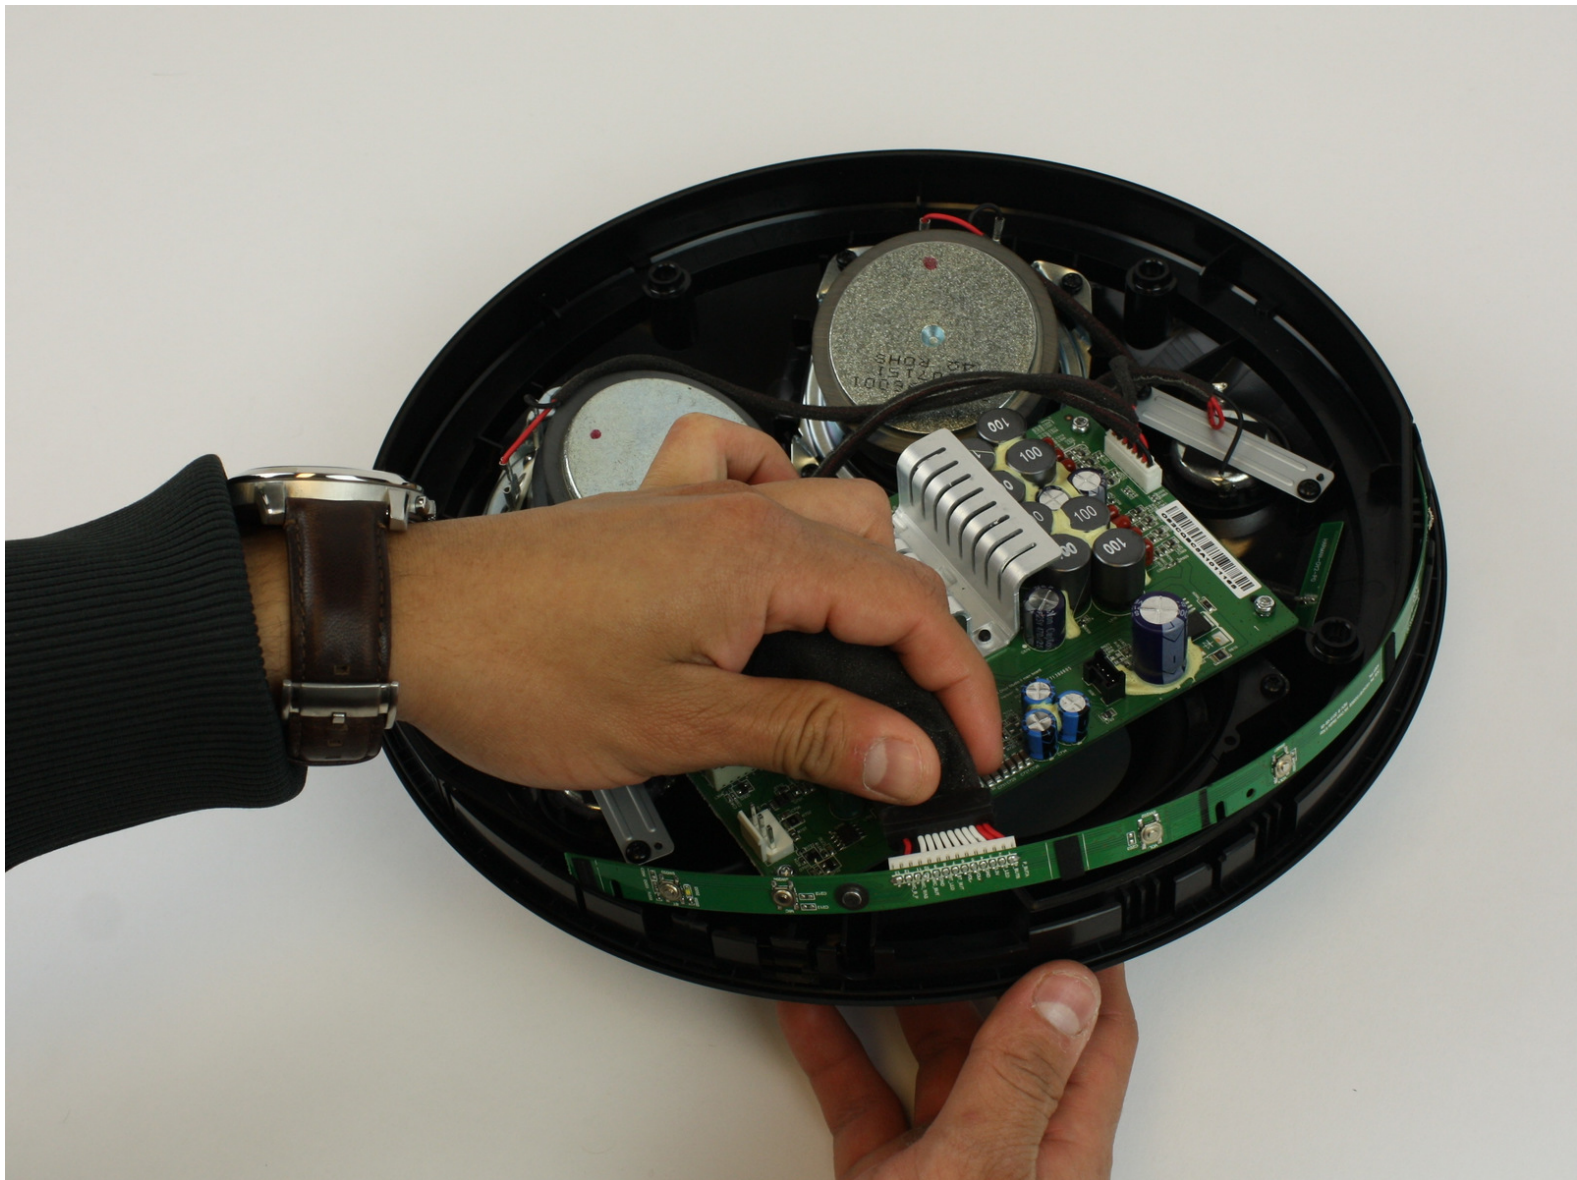

INTRODUCTION

If the buttons on your device aren't working, it may be time to replace your control board. Follow this guide to do so.



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [T10 Torx Screwdriver](#) (1)
-

Step 1 — Front Panel



- Using a plastic opening tool, pry off the front grill by wedging it in the notch on the front of the device.

Step 2





- Remove the five 14.4 mm T10 Torx screws.

Step 3




- Gently pull the front apart from the back.

Step 4

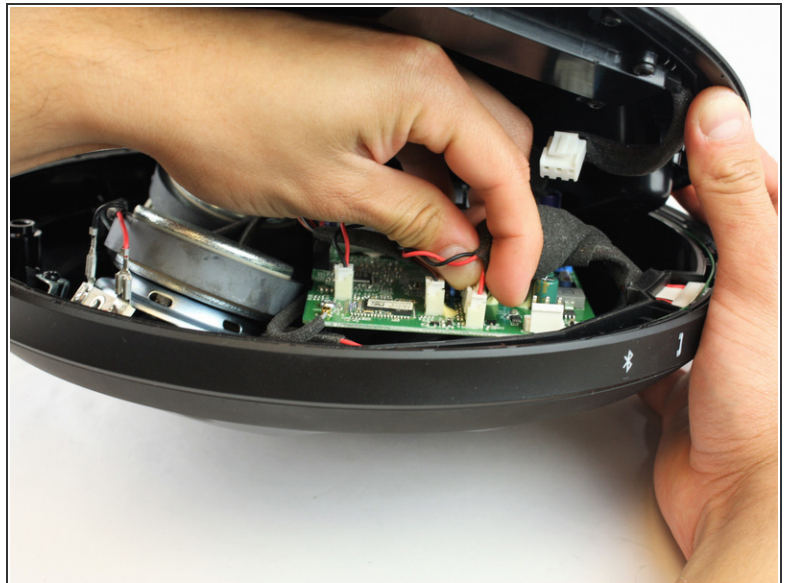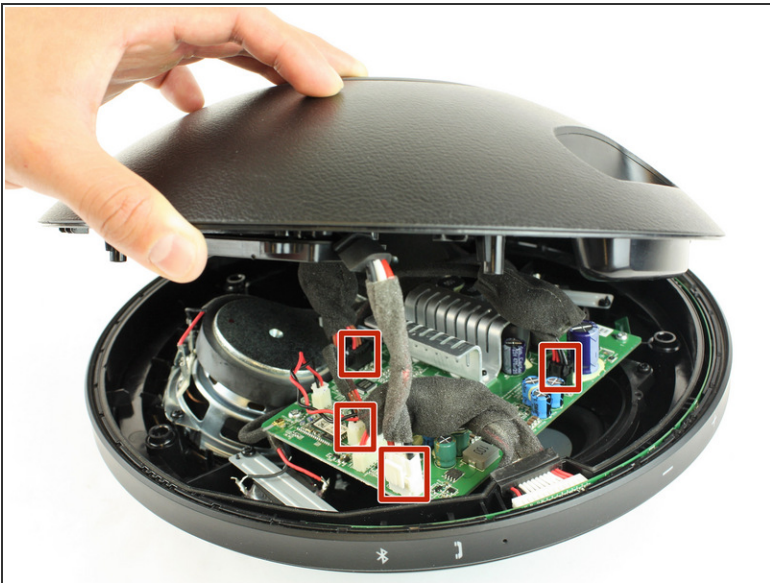


- Remove the four wires connecting the front and back panels.
- Pinch the connector tab and pull gently upwards.
- Repeat for the other three connectors.

Step 5 — Control Board

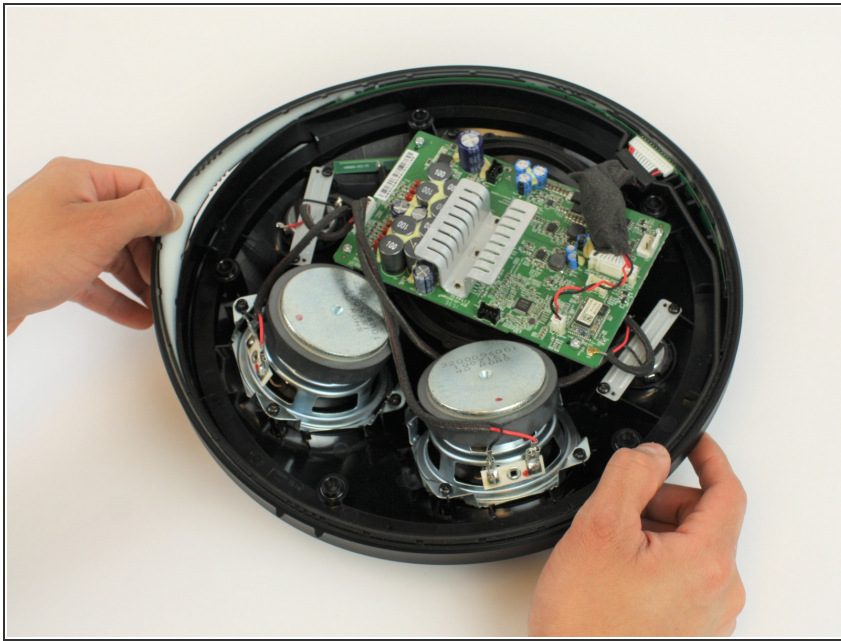


- Pull the silicone button band off of the outer edge of the speaker.

Step 6

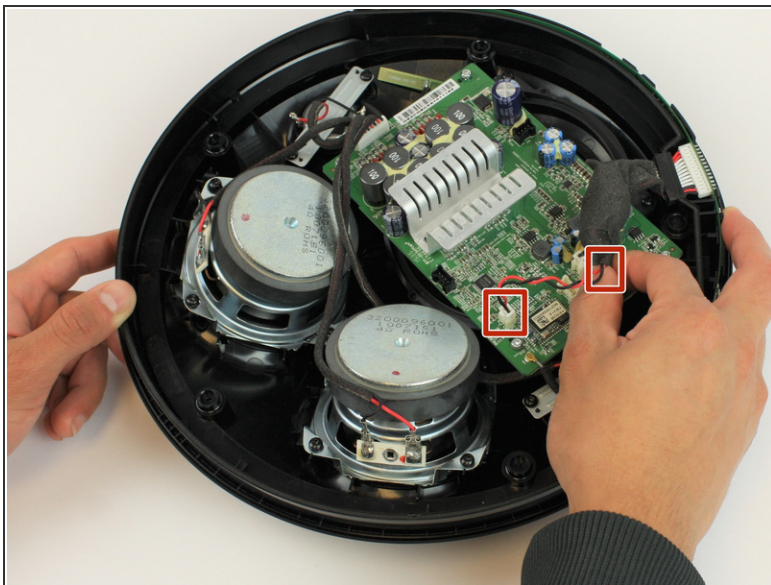


- Disconnect the two pressure connections from the circuit board.

Step 7

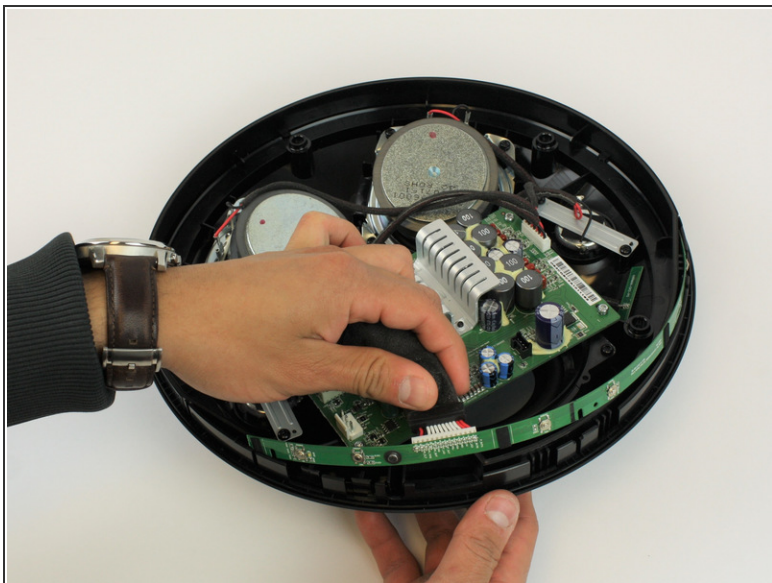

- Gently remove the control board band by placing fingers in contact with it through the button openings.

 Work from the outer edges in so as not to bend the band.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-22 06:24:06 PM.